


Work Inspection Camera

RICOH SC-20

Alias Settings

Example of utilization

RICOH
imagine. change.

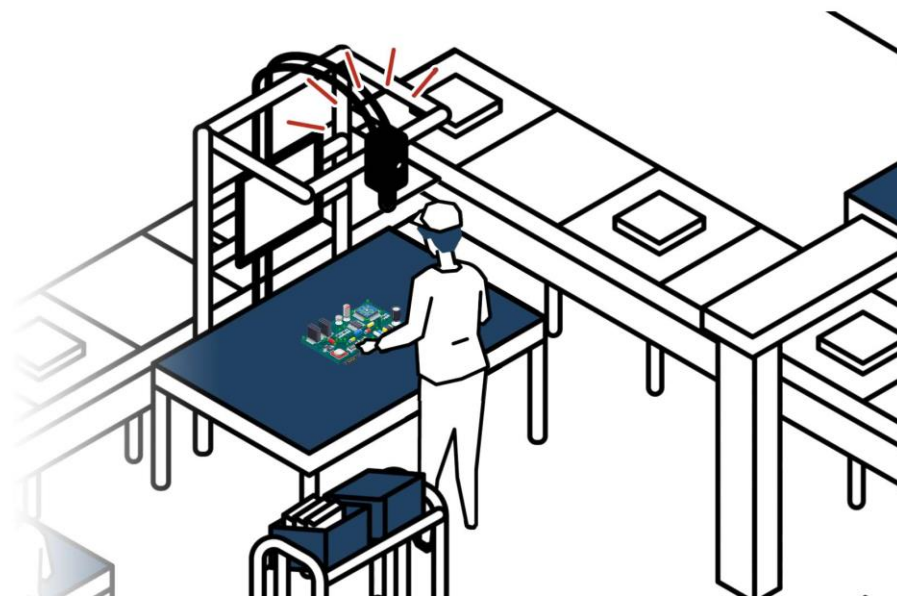


What is Alias Settings ?


The SC-20 "Alias Settings" function allows the operator to associate an arbitrary character string (alias) with a specific [Job ID], so that the operator can start work by entering the alias instead of the [Job ID].

A single [Job ID] can have multiple aliases associated with it, allowing for smart operation by allowing products from **multiple destinations** and for **different customers** to share **the same work content**.

1 Click [Alias Settings] from the [Job Settings] menu.

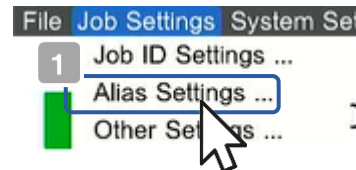


2 Check the "Enable" checkbox in the "Alias Settings" dialog box to enable alias settings.

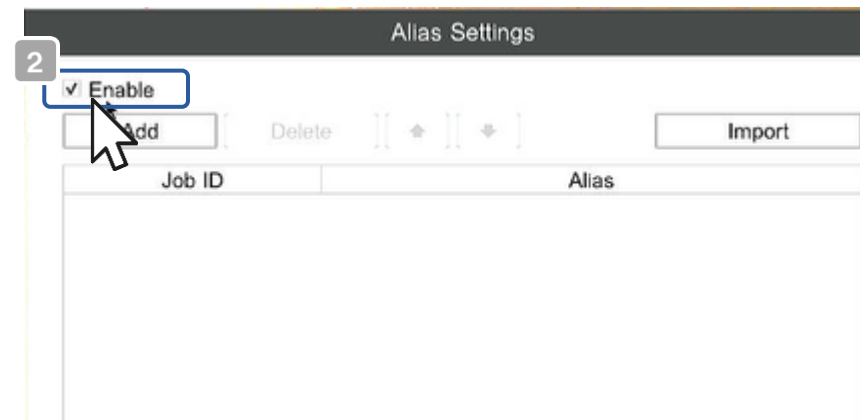


Setting Example

3 In the Job ID column, enter an existing Job ID. In the Alias column, enter the string you wish to correspond to. Sequentially add registrations by clicking the "Add" button.

In the example on the right, the association is as follows

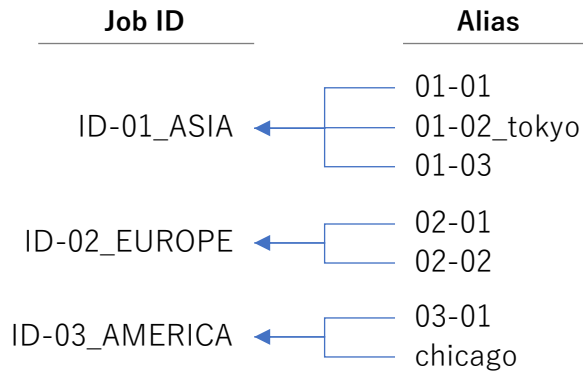

After the above setting, only the entry of the alias, not the Job ID, will be valid. For example, a worker can start work by entering 03-01 or chicago instead of ID-03_AMERICA in the "Rename Job ID" dialog.

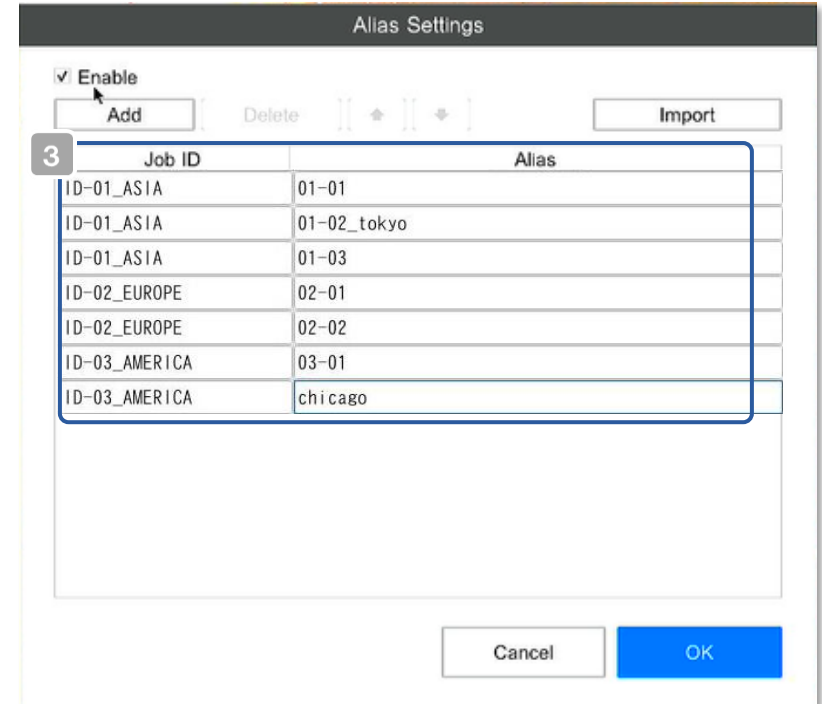

※ For details, see [RICOH SC-20 Operating Instructions](#) [11. Job Settings - Alias Settings]